


EASY HYDRO PUMP KIT - SET-UP

- 1x A :** Brass tap
- 1x B :** Brass reducer
- 2x C :** Pipe connector
- 1x D :** Rainwater pipe
- 2x E :** Submersible pump
- 1x F :** Inline filter
- 1x G :** 90° elbow connector & suction filter
- 1x H :** Wall mountable hose/tap connector



PTFE Tape Required
(Please use PTFE Tape on Threads Shown)

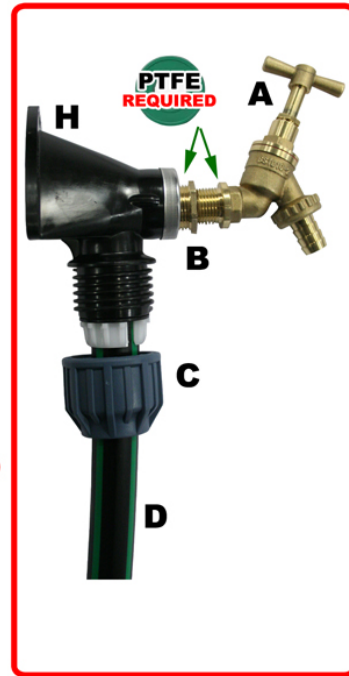

1. Attach nylon cord to pump
2. Attach pipe to pump, using pre-fitted compression fitting (C)
3. Remove priming cap on pump and fill to the brim with water (approximately 2 litres)
4. Wearing thick gloves for protection, lower the pump into the tank, using the nylon cord
5. Fit 3/4" x 1/2" bush (B) to wall mounted tap connector (H), using the PTFE tape supplied
6. Fit brass tap (A) into bush (B), using PTFE tape
7. Mount wall mounted tap connector into exterior wall using suitable fixings (not supplied)
8. Connect pipe to bottom of wall mounted tap connector
9. Plug pump into 230V socket

This must be plugged into the nearest electrical point

